

Notice Follow The Instructions When Operating This Product

1. Always wear eyes protective gear.
2. Never look into the launcher muzzle.
3. Never point the launcher or shoot towards a person or an animal.
4. Store the launcher at places out of reach by children.
5. Always put the launcher in a case or bag when you are carrying it.
6. Always put your finger away from the trigger except when you are ready to fire.
7. Set selector lever at the safety position and attach protective cap when not in use.

Installation Guide



1. Loose the screws on the front and rear launcher mounts and take both the upper clips off the mounts.



2. Pull the cleaning rod out from rifle.




3. Put the rear launcher mount lower mount underneath the outer barrel as indicated. Then insert the cleaning rod back through the rear launcher mount.



4. Place the rear launcher upper clip on top of the outer barrel and fix it with the rear launcher mount by the screws from step 1.



5. Place the front launcher mount on the outer barrel near the gas block and fix it as the same way as the rear launcher mount.

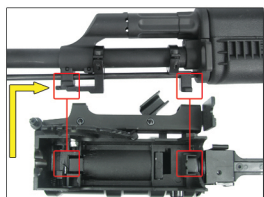

6. Install the GP-30 grenade launcher to the front and rear launcher mounts, slide the launcher to the mount slots towards the back of AEG until you hear a "click" sound, which indicates that the GP-30 is installed and locked together with the mounts.



7. Installation complete.

Quick Detach From The Rifle



1. To detach the grenade launcher, press the indicated button.



2. While the button is being pressed, push the launcher forward to detach it from rifle.

Safety Setting



1. **Safe Mode**
Always set the lever to safe position when you are not firing the launcher or during storage.




2. **Fire Mode**
Pull the trigger to fire when cartridge is inserted.

Operate The Launcher



1. Insert a 40mm cartridge into the GP-30 grenade launcher.

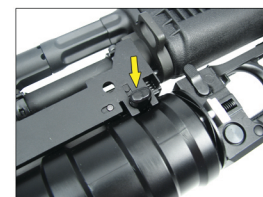

2. While inserting the cartridge, press the cartridge lock button indicated.



3. Release the lock button once the cartridge reached the end of the launcher barrel, the cartridge should be locked inside the launcher now.



4. Set the selector lever to fire mode, and then pull the trigger to fire the cartridge.



5. To remove cartridge from launcher, press the cartridge lock button to and release and pull the cartridge out.