



- | | | | |
|----------------|-------------------------------|----------------|--------------------------------------|
| 1、枪头 | gun cap | 51、2.5×12KMHO | 2.5x12 KMHO |
| 2、铝外管 | aluminum barrel | 52、扳机保险2 | trigger safety 2 |
| 3、过只铜管 | hop-up copper pipe | 53、扳机鼓形压簧 | trigger barrel-type spring |
| 4、铜管定位件 | fixed copper pipe set | 54、3×6PWMHOD=8 | 3x6PWMHO D=8 |
| 5、过只橡胶 | hop-up rubber | 55、3×10PMHO | 3x10 PMHO |
| 6、过只 | hup-up | 56、主力簧座定位件 | main spring base fixed set |
| 7、橡胶调节件 | rubber adjustment | 57、主体 | gunbody |
| 8、2×12光轴 | 2x12 axis | 58、前背带环座 | fore sling set base |
| 9、调节橡胶 | adjust rubber | 59、背带环座A | slingset base A |
| 10、固紧圈 | fixed circle | 60、背带环座B | sling set base B |
| 11、3×4钻力 | 3x4 screw | 61、背带环座A | sling set A |
| 12、铜管管正件1 | barrel adjust set1 | 62、背带环座B | sling set B |
| 13、铜管管正件2 | barrel adjust set 2 | 63、3×27KMHO内六角 | 3x27KMHO HEX SCOKET |
| 14、4×8钻力 | 4x8 screw | 64、3×14KMHO内六角 | 3x14KMHO HEX scoket |
| 15、风筒管正圈 | pistol adjustcircle | 65、扳机圈盖扣件扭簧 | trigger circle cover lock set spring |
| 16、合金风筒 | alloy pistol | 66、2.5×18单花 | 2.5x18 screw |
| 17、拉手座 | puller base | 67、扳机圈盖扣只 | trigger circle cover lock set spring |
| 18、3×4KMHO | 3x4 KMHO | 68、扳机圈 | trigger circle |
| 19、3×4钻力 | 3x4 screw | 69、扳机圈盖 | trigger circle cover |
| 20、鱼骨 | rail | 70、2.5×19.5单花 | 2.5x19.5screw |
| 21、4×10KMHO内六角 | 4x10 KMHO HEX SCOKET | 71、5×32KMHO内六角 | 5x32KMHO HEX SCOKET |
| 22、4×12KMHO内六角 | 4x12KMHO HEX SCOKET | 72、5×40KMHO内六角 | 5x40KMHO HEX SCOKET |
| 23、外风筒 | outer pistol | 73、后托底座 | stock base set |
| 24、主力簧座 | main spring base | 74、4×12KBHO内六角 | 4x12KBHO HEX SCOKET |
| 25、主力簧座定位钉 | main spring base fixed nail | 75、后托垫件1 | stock pad 1 |
| 26、705主力簧垫片 | 705 main spring pad | 76、后托垫件固定件 | stock pad fixed set |
| 27、主力簧 | main spring | 77、后托垫件2 | stock pad 2 |
| 28、内风筒 | inner pistol | 78、后托橡胶座 | stock rubber base |
| 29、风筒O型圈 | pistol O circle | 79、后托橡胶 | stock rubber base |
| 30、减震垫 | damping pad | 80、4×52HMHO内六角 | 4x52HMHO HEX SCOKET |
| 31、风筒管正圈 | pistol adjust circle | 81、贴脸 | chin rest |
| 32、气塞座 | air lock base | 82、贴脸调节螺母 | chin rest adjust nut |
| 33、拉手 | puller | 83、弹盒座 | magazine base |
| 34、拉手定位件压簧 | puller fixed spring | 84、4×9PMHO | 4x9PMHO |
| 35、拉手定位钉 | puller stop nail | 85、升弹头 | bullet pusher |
| 36、拉手定位座 | puller stop base | 86、升弹头连接件 | bullet pusher linker |
| 37、4×12HMHO内六角 | 4x12HMHO HEX SCOKET | 87、弹盒嘴 | magazine mouth |
| 38、保箱左件 | gearbox left set | 88、弹盒卡件 | magazine lock set |
| 39、保箱右件 | gearbox right set | 89、弹盒卡件塔形压簧 | magazine lock set turet spring |
| 40、联动保险簧 | linkage insure spring | 90、左弹盒 | left magazine |
| 41、扳机保险1 | trigger safety | 91、右弹盒 | right magazine |
| 42、风筒扣只扭簧 | pistol locking spring | 92、扁压簧 | flat spring |
| 43、3×15光轴 | 3x15 axis | 93、弹簧座 | spring base |
| 44、扳机扣件 | trigger fastening | 94、2.3×8PBHO | 2.3x8 PBHO |
| 45、传动连杆 | linkage connecting rod | 95、弹盒外壳上 | magazine outer shell |
| 46、3×15光轴 | 3x15 axis | 96、弹盒回位压簧 | magazine return spring |
| 47、传动连杆压簧 | linkage connecting rod spring | 97、弹盒外壳下 | magazine outer shell |
| 48、扳机回位簧 | trigger return spring | 98、2×21光轴 | 2x21 axis |
| 49、扳机 | trigger | | |
| 50、3×15光轴 | 3x15 axis | | |