

A74U SERIES

.177 Cal.CO2 BB


18/±
AGE

IMPORTANT THIS AIRGUN IS INTENDED FOR USE BY THOSE 18 YEARS OF AGE OR OLDER.



A74U SERIES

CO2 AIR GUN

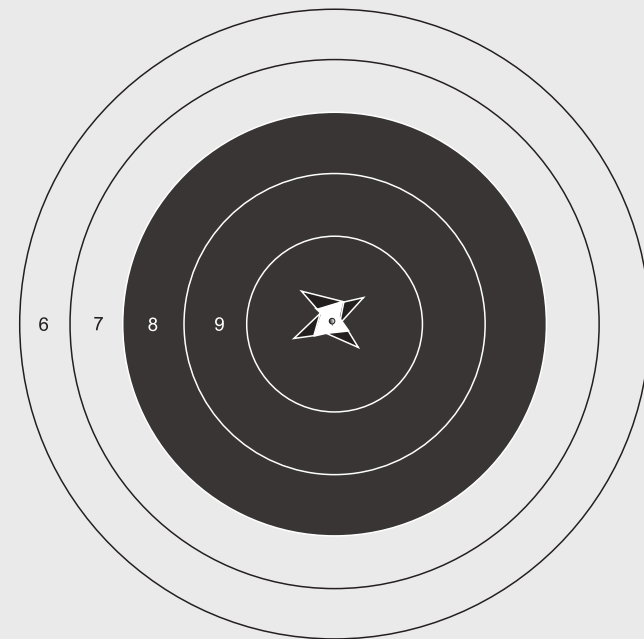

HANDLING CAUTIONS AND INSTRUCTION MANUAL
ALWAYS READ THROUGH THIS MANUAL BEFORE OPERATION.

ATTENTION

Always read through this manual before operation

- PLEASE USE 4.5MM/.177 STEEL BBS ONLY.
- WHEN USING, PLEASE MAKE SURE ALL SURE THE AREA IS CLEAR AND SAFE AS RECOIL MAY CAUSE INJURY. PLEASE MAKE SURE TO USE PROPER EYE WEAR AND PROTECTION OR THOSE AROUND AND THE USER.
- DO NOT USE ANY OTHER TYPE OF AMMOS OTHER THAN STEEL BBS. MISUSE OF INCORRECT BBS WILL VOID WARRANTY.
- NEVER POINT THE GUN AT ANYONE ELSE.
- DO NOT PUT THE FINGER ON THE TRIGGER UNTIL YOU ARE READY TO SHOOT.

SPECIFICATIONS

Power Plant	12gram CO2
Recommended Age	18+
Caliber	4.5mm(.177)
Magazine	UP to 18 BBS
Barrel	Smooth Bore
Safety	Manual
Velocity	≥400 FPS
Overall Length	1030MM
Shooting Range	50-70Meters

— 1 —

Component Name



★ Some features may vary depending on models.

— 2 —

Loading CO2

- Press the magazine release to remove the magazine. (Hold the magazine as it may drop. To prevent damage to the magazine, do not drop the magazine.)
- Push on the release to remove magazine top.
- Remove the magazine core as shown on picture.
- Loose the screw to install the cartridge.
- Install the cartridge and make sure it set in the center place.

ATTENTION
Always use the steel Bbs bullet for this air gun.

— 3 —

Loading Magazine BBs

- Turn Clockwise to tighten screw. (Do not overtighten as this may cause leakage and damaged to the orings.)
- As the picture shows, press the push rod.
- Press down as the direction of the arrow.
- Press down the pust rod from the slot.
- Insert 4.5mm bullets into the magazine, the max capacity is 18 pcs.

ATTENTION
If the steel Bbs get stuck and stop somewhere, upside down the magazine to let the Bbs fall down.

— 4 —

Loading Magazine BBS

- Exit the pust rod from the slot.
- Push the magazine core in place, until the release button locks the magazine shell.
- Make sure to set the magazine upwards and connect it firmly until a click sound is heard.
- Confirm that the safety lever is set to the safety position and don't place your finger on the trigger.

ATTENTION
We shall not be responsible for any damage or accidents arising from the use of bullets supplied by other manufacturers.

— 5 —

Safety Setting(Always set the safety lever to SAFE until immediately before firing.)

- A** When you are not firing the gun or during storage, Always set the safty lever to the safe position.



- B** Set the safty lever to semi automic, pulled the trigger will fire one shot each time.



ATTENTION
Pulling the trigger with the selector being set to safe may damage the gun.

ATTENTION
Never operate the selector while pulling the trigger. Otherwise, malfunctions are possible, resulting in accidents.

— 6 —

FIRING(confirm safety sufficiently before beginning firing)

- Never aim the gun at people or animals.
- Never shoot in the place where there are crowded people and heavy traffic or something explosive and flammable.
- Shooters must pay attention to the surrounding environment and put on goggles while do the shooting.



- CAUTION**
- Activating the trigger carelessly is extremely dangerous. Never put your finger onto the trigger.
 - Blank fires may occur after loading and inserting the magazine, this is normal.

— 7 —

DETAIL LIST

